



RLY-DPDT-15A RELAY CONNECTIONS

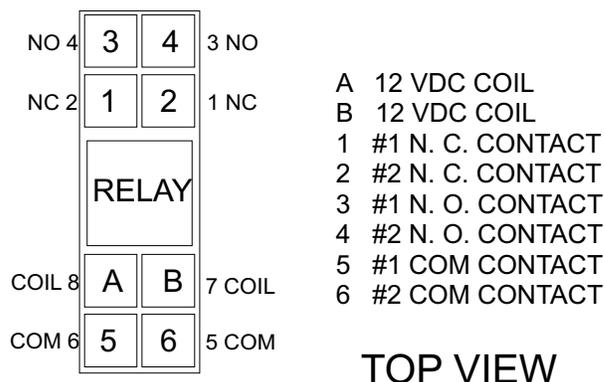

IMPORTANT NOTE: Connect HVAC equipment up to the N. C. contacts so equipment will operate with the relay in a de-energized state.

Installation Instructions: Mark the two relay mounting screws holes using a fine point marker on a suitable flat surface inside the HVAC equipment. Drill holes using a 7/64 drill bit (#36) and tap using a 6-32 tap. Use the enclosed 6-32 machine screws to mount the relay.

RLY-DPDT-15A RELAY CONNECTIONS

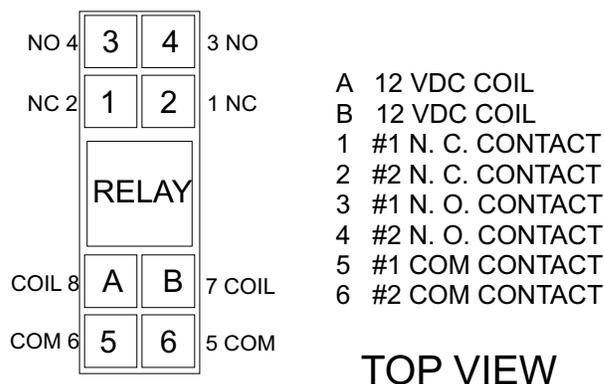

IMPORTANT NOTE: Connect HVAC equipment up to the N. C. contacts so equipment will operate with the relay in a de-energized state.

Installation Instructions: Mark the two relay mounting screws holes using a fine point marker on a suitable flat surface inside the HVAC equipment. Drill holes using a 7/64 drill bit (#36) and tap using a 6-32 tap. Use the enclosed 6-32 machine screws to mount the relay.